

 
ULTRA THIN TWO WAY RADIO USER MANUAL



Basic Information

Including

Radio Body x1, Battery x1, Adaptor x1,
Charging Cable x1, Belt Clip x1, Hand Strap x1,
User Manual x1

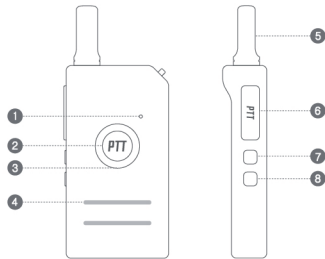

Basic Parameter

 
Dimension: 123x52x21.5mm

Weight: 80g

Storage Channel: 16CH

Operating Voltage: 3.3-4.2V DC

Operating Temperature: -20°C~-50°C

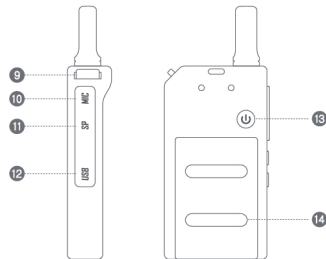

- | | |
|-------------------|---------------------|
| ① Microphone | ⑧ Channel - |
| ② PTT Key | ⑨ Volume Key |
| ③ Breathing Light | ⑩ MIC Jack |
| ④ Speaker | ⑪ Earphone Jack |
| ⑤ Antenna | ⑫ USB Charging Port |
| ⑥ Side PTT Key | ⑬ Power On/Off |
| ⑦ Channel + | ⑭ Battery |

 
I Power On/Off

Long press "Power On/Off" Key for 2 seconds to turn on/off the radio.




II Channel Selection

Short press "Channel +" to increase the channel number.
Short press "Channel -" to decrease the channel number.

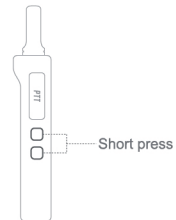


III Push To Talk

 Press "PTT Key / Side PTT Key" to transmit, release to exit.

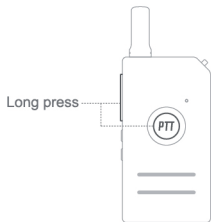

V Current Channel Broadcast

 Long press "Channel +" for 1.5S to know the current channel.

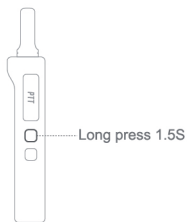

VII Breathing Light

 
After standby for 10S, the breathing light is activate. It will lighting each 5S.

VIII Scan Function

Scan function is activate in No. 16 channel, stop to scan after exiting No.16 channel.


IV Monitor Function

Long press "Channel -" for 1.5S, then monitor function is activate, you can listen to the channel you selected whether someone is talking, if there is no signal, you will hear the sound of rustling.

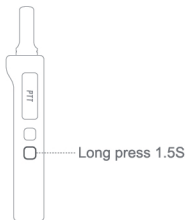

VI Volume Adjust

 
Toggle "Volume +" to increase the volume, toggle "Volume -" to decrease the volume. You will hear a beep sound when the volume is maximum or minimum.

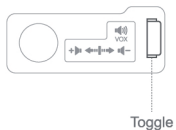

Care and Cleaning

To guarantee optimal performance as well as a long service life of the product, please follow the tips below.

- Do not puncture or scratch the product with hard objects.
- Do not place the product in corrosive agents, solutions or water.
- Do not handle the radio by its antenna or external microphone directly.
- When not in use, keep the accessory jacks covered with the protective caps.

 Power off the product, and remove the battery before cleaning.

- Clean up the dust and fine particles on the product parts with a clean and dry lint-free cloth or a brush regularly.
- Use a non-woven fabric with neutral cleanser to clean the keys, control knobs, and shell after long-time use. Do not use chemical preparations such as stain removers, alcohol, sprays or oil preparations.
- Make sure the product is completely dry before use.